


OMSA LINE

FOLDING CASE STEP




CODE : 97KM001

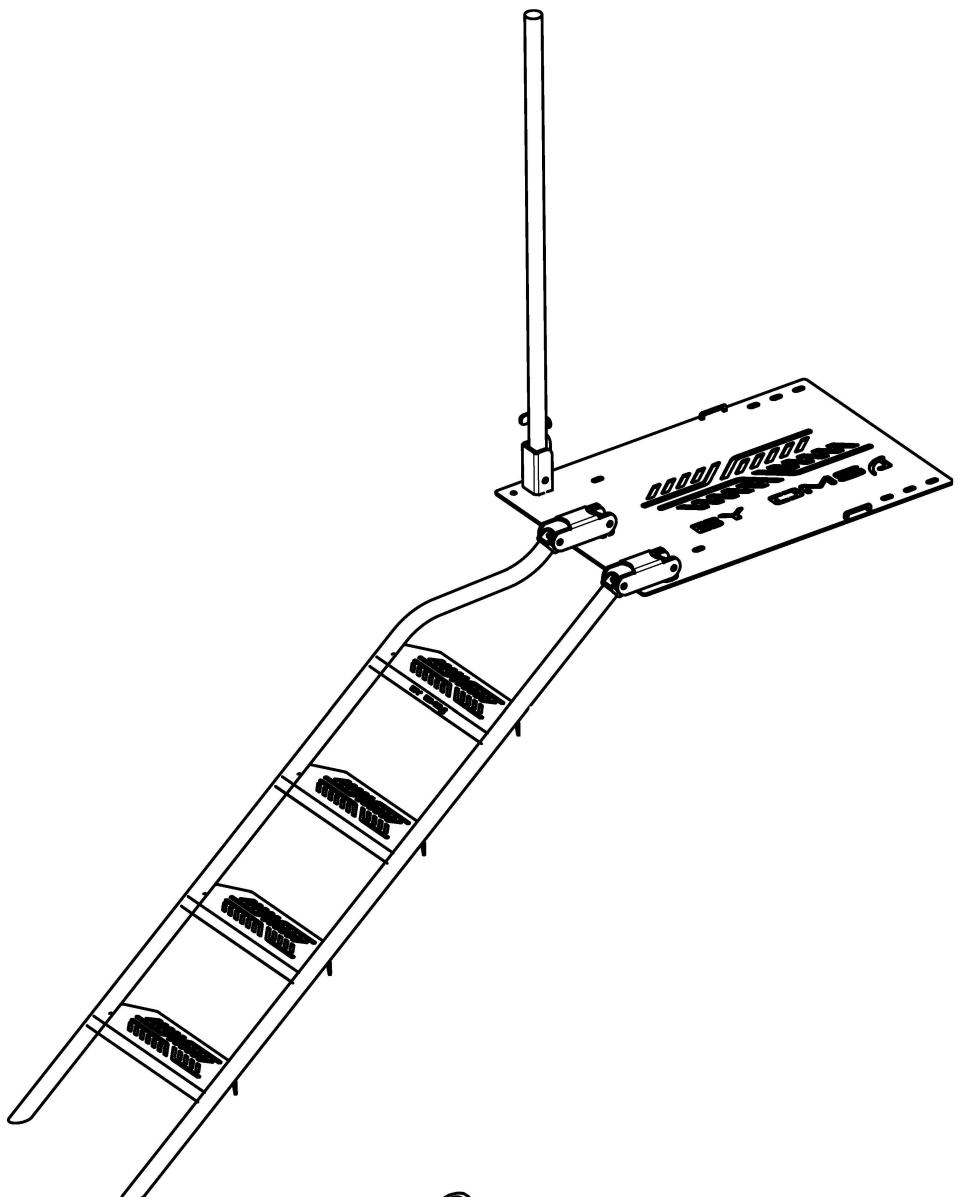

SW10 (10Nm)








SW13 (20Nm)

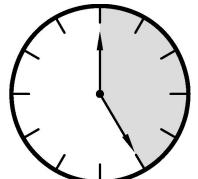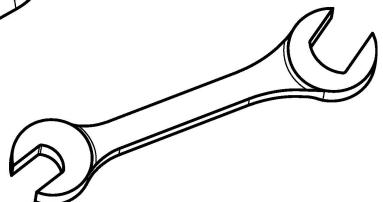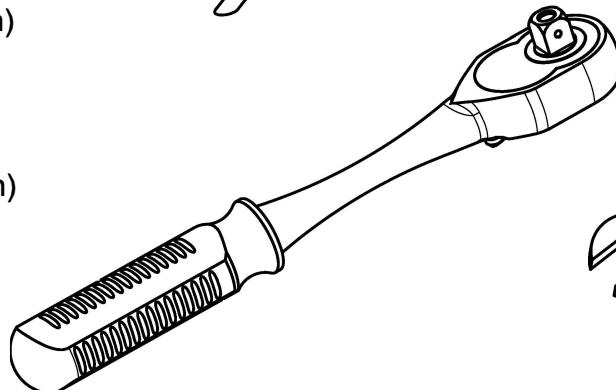


Version: 1.02 May 2019

INSTALLATION SET

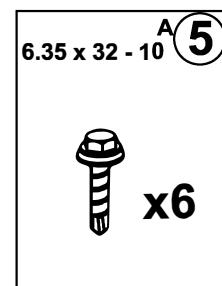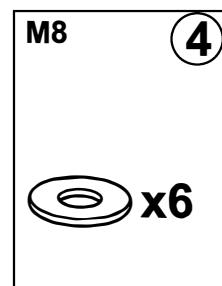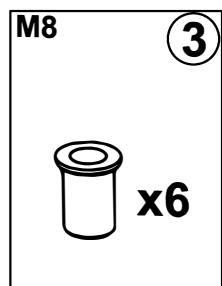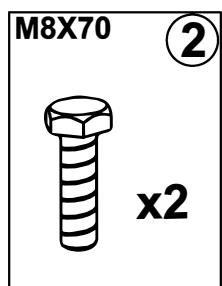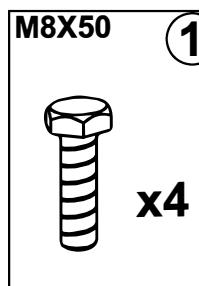


INSTALLATION SCHEME

①

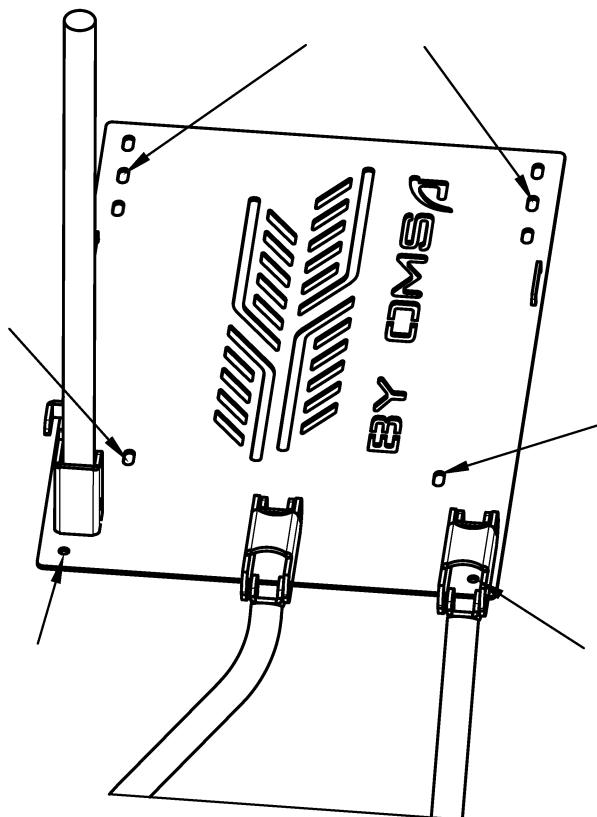

②

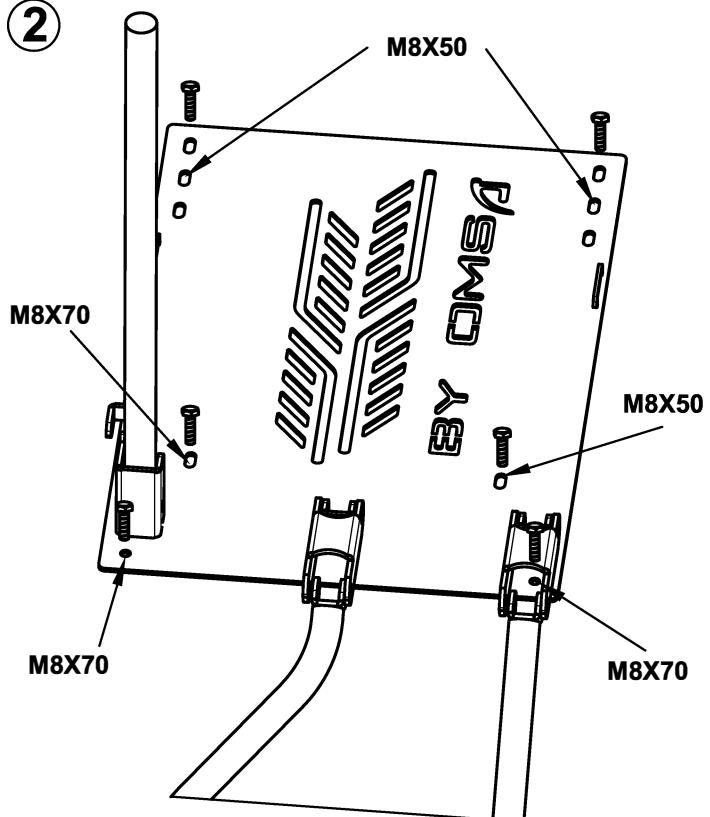

TECHNICAL DETAIL

1. TO FIX THE LADDER PLATE, MARK THE LOCATIONS SHOWN IN THE PICTURE AND DRILL THE CASE COVER

2. FIX THE DRILLED PLACES WITH RIVET NUT

3. INSTALL THE PRODUCT ON YOUR VEHICLE AS IN THE PICTURE