

OMSA LINE

MITSUBISHI L200 2006-2010



CODE : 4903DKA111



SW13 (20Nm)



SW15 (40Nm)

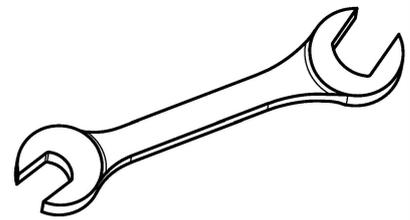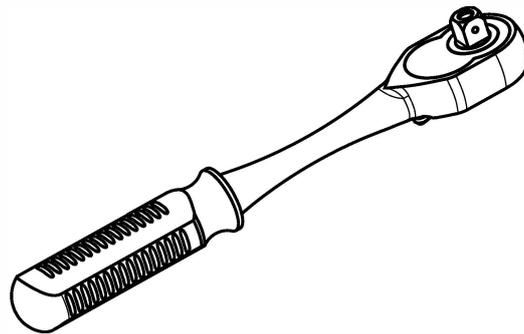


SW13 (20Nm)

SW15 (40Nm)

Scan the QR code to download the assembly instructions





Version: 1.02 June 2025

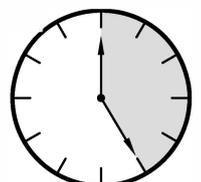

25 minutes


BY OMSA[®]

MOUNTING SET

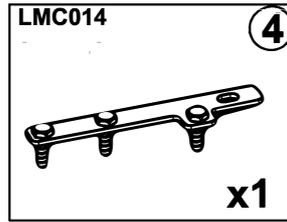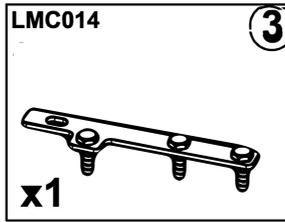

1. M10x35mm *M10x35 BOLT FLANGED*
2. M10 *M10 NUT FLANGED*
3. M10 *M10 MOUNTING PLATE*
4. M10 *M10 MOUNTING PLATE*


BRACKETS

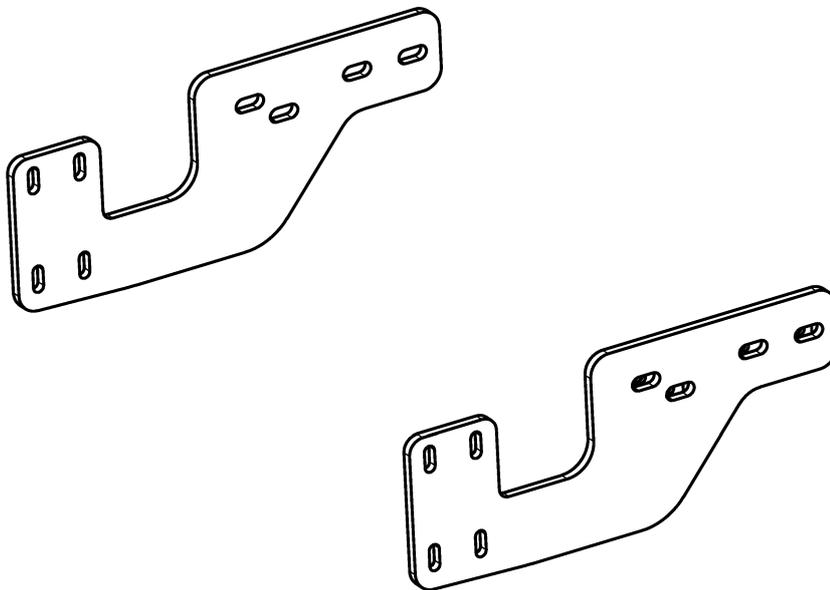

BRACKETS

- A. 4903DKA LR / LEFT REAR BRACKET
- B. 4903DKA RR / RIGHT REAR BRACKET

MOUNTING SCHEME

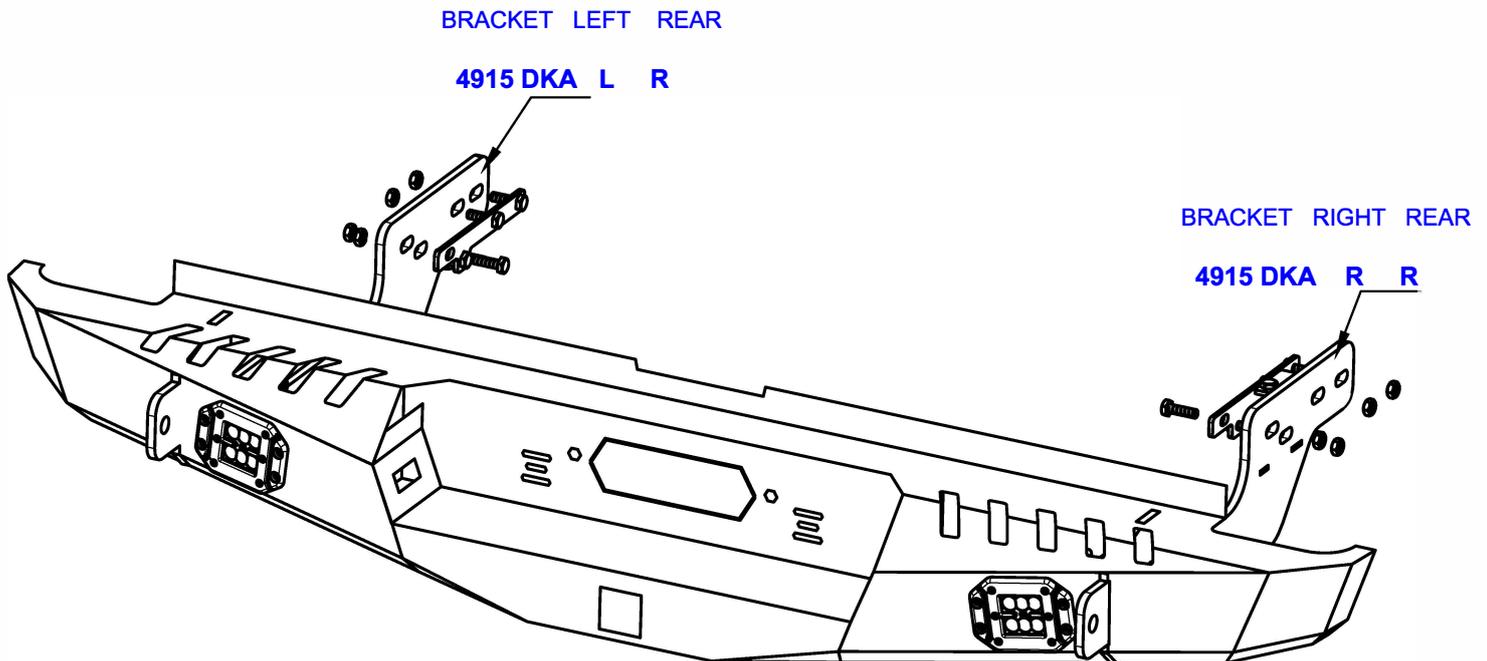

ATTENTION

Please do not start the installation without reading the Assembly Instructions.

Our company is not responsible for any damage to the product and/or the installation area resulting from installations that are not carried out in accordance with the Assembly Instructions.

OMSA LINE